Spirit 110

Corded Telephone

USER GUIDE

Unpacking your phone

In the box you will find:

- Base Unit
- Handset
- Coiled Handset cord
- Telephone line cord for Base unit
- User manual

Keep the packing materials in a safe place in case you later need to transport the unit.

Keep your sales (till) receipt, which is your guarantee.

Argos VALUE RANGE

1. Where to find it

1. **Ringer light - This flashes when the phone is ringing for an incoming call.**
2. **M1,M2 and M3 one -Touch Memory Buttons**
3. **STO (Store)button**
4. **MEM button**
5. **LNR(Last Number Redial) button**
6. **Mute button**
7. **R(Recall) button**
8. **P(Pause) button**

2. Installation

1. Locating the Base unit

The Base unit should be placed on a level surface, in a position where:

- the **telephone line cable** will reach your telephone line socket or extension socket.
- it is **not close to a sink, bath or shower**, or anywhere else where it might get wet.
- it is **not close to other electrical equipment** - fridges, washing machines, microwave ovens, TVs, fluorescent lights, etc.

2. Plug the coiled handset cord into the Handset. Plug the other end into the jack on the left side of the Base unit.

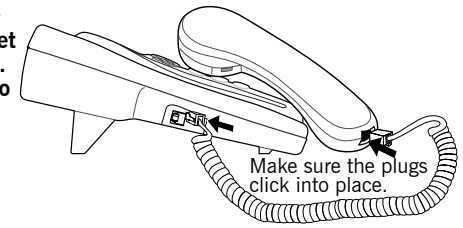

3. Place the Handset in the Base unit.

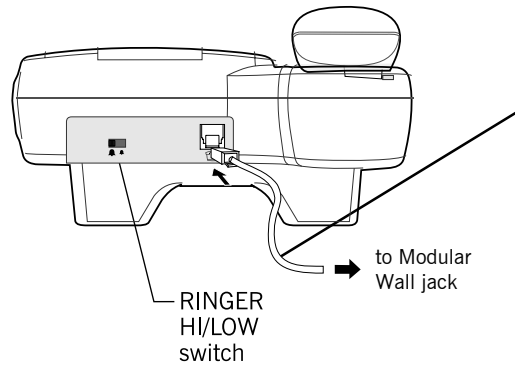

Always use the telephone line cord supplied with your Spirit 110 phone. Other telephone line cords may not work.

4. Plug one end of the telephone line cord the jack at the back of the base unit and the other end into modular wall jack.

5. Lift the Handset and check for Dial tone in the earpiece.

3. Telephone Operation

Making a call	1		**Lift the Handset, listen for a dial tone.**
	2	1 2 3 4 5 6 7 8 9 * 0 #	**Dial the telephone number you wish to call.**
	3		**To end the call, return the Handset to the Base unit.**
To answer a call			**Lift the handset to answer call.**
To end a call			**Replace the Handset on the Base unit cradle.**
Last Number Redial	1		**Lift the Handset to redial the last number.**
	2	LNR	**Press LNR button.** ⇨ The phone automatically dials the last number you called (maximum of 32 digits).
Mute Function		⊠	**During a call press and hold the ⊠ (MUTE) button.** ⇨ When the mouthpiece is muted, the person at the other end of the call cannot hear you but you can hear his side.
	2	⊠	**To get back to the call, release the ⊠ (MUTE) button.**
Use on PBX			If you are using your Spirit 110 phone on a PBX,and the PBX user guide tells you to press **RECALL**;
		R	**Press R (RECALL) button on your Spirit 110 phone.**

Telphone Operation continue...

Inserting a Pause in the dialing sequence			For some switchboard system, an access number must be dialed (usually an 8 or 9) to get another dial tone and an outside line.
	1	P	**Pressing PAUSE button immediately after the access number, a pause of about 3.6 seconds will be entered, and the desired number can be dialed immediately.**
	2	P	**Press PAUSE button to insert a pause when dialing or storing Long Distance Access Codes.**

Storing a Number in M1,M2,M3 one-touch memories

1 **Lift up Handset, press STO (store) button**

2 **Key in the telephone number you wish to store.**
⇨ Up to a maximum 16 digits.

3 **Press M1,M2 or M3 button to store the number in the selected memory.**
⇨ If you try to store more than 16 digits, only the first 16 digits will be saved.

Storing a Number in (0-9) two-touch memories

1 **Lift up Handset, press STO (store) button**

2 **Key in the telephone number you wish to store.**
⇨ Up to a maximum 16 digits.

3 **Press MEM and then the 0-9 button to store the number in the** selected memory.

Replace the Handset on the Base unit cradle.

Dial out Stored number

Lift up Handset, press M1,M2,M3 buttons.

⇨ The number dials automatically.

Dial out Stored number (0-9) two-touch memories

To dial a number stored in Two-touch memory (0-9)
- Lift up the handset.
- Press the **MEMORY** button(MEM)
- Key in the memory location number (0-9)

⇨ The number dials automatically.

4. Guarantee and service

This product is guaranteed against manufacturing defects for a period of 1 Year.

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use.

In the event of a problem with the product within the guarantee period please return it to your nearest Argos store.

If the item is shown to have had an inherent defect present at the time of sale, the store will provide you with a replacement.

Your statutory rights remain unaffected.

Guarantor; Argos Ltd

489 - 499 Avebury Boulevard

Central Milton Keynes

MK9 2NW

5. Technical details

Standard	Spirit 110 Telephone
Temperature range	Operating 0 ºC to 40 ºC Storage -20 ºC to 60 ºC
PBX compatibility	Timed break recall: 100 ms. Pause length: 3.6 seconds. Signalling type: DTMF (dual-tone multifrequency) also called tone dialing.
Network connection	This equipment is intended to be used in the UK only. Operation on other countries' PSTN termination points cannot be guaranteed.

Connection and conditions for use

You can connect your Spirit 110 phone to a direct exchange line (DEL) - a line connected to a local exchange, with its own phone number; to an extension socket connected to a DEL; or to an extension on an approved compatible PBX. Do not connect the Spirit 110 phone as an extension to a pay phone.

The **ringer equivalence numbers (RENs)** of all instruments (phones, fax machines, etc.) connected to an exchange line **must not add up to more than 4** - otherwise, one or more of them may not ring and/or answer calls correctly.

The Spirit 110 phone has a REN of 1, and most other telephones have a REN of 1 unless marked otherwise.

EC Declaration of Conformity

We the manufacturer / Importer : Binatone Telecom Plc
1 Apsley Way London
NW2 7HF, United Kingdom.

Declare under our sole responsibility that the following product

Type of equipment:	Corded Phone
Model Name:	Spirit 110
Country of Origin:	China
Brand:	Value

complies with the essential protection requirements of R&TTE Directive 1999/5/EC on the approximation of the laws of the Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to ***electromagnetic compatibility (EMC)*** and the European Community Directive 2006/95/EC relating to ***Electrical Safety.***
Assessment of compliance of the product with the requirements relating to the essential requirements according to Article 3 R&TTE was based on Annex III of the Directive 1999/5/EC and the following standard:

EMC: **EN55022:2006**
EN55024:1998 + A1+A2

Electrical Safety: **EN 60950-1:2001+A11 : 2004**

The product is labelled with the European Approval Marking CE as show. Any Unauthorized modification of the product voids this Declaration.

Manufacturer / Importer
(signature of authorized person)

Signature: (K.H.Mueller, CT0)

Signature:

London,

Place & Date: 18th Sep, 2009

Waste electrical products must not be disposed of with household waste. This equipment should be taken to your local recycling centre for safe treatment.

Contents of this User Guide

1. **Where to find it**
2. **Installation**
3. **Telephone operation**
4. **Guarantee and service**
5. **Technical details**

Pressing buttons on your phone

- When the instructions in this user guide tell you simply to '**press** ' a button, this means that you should **press the button briefly, then release it**.
- When the instructions tell you to '**press and hold**' a button, this means you should **keep the button pressed** until the display changes and / or you hear a tone.

UK Argos(VALUE) Ver4 .0 05-Nov,2009